DWM-380
DVD Video Player

Quick-Guide

SANYO

1 Accessories

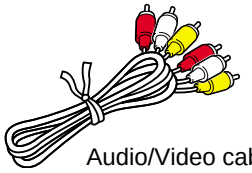

Audio/Video cable

RB-SL20 wireless remote control

2 “AA” batteries (not supplied)

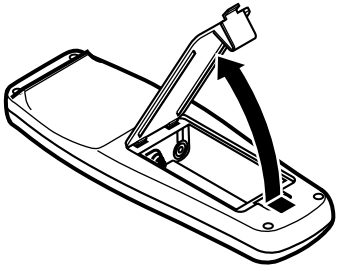

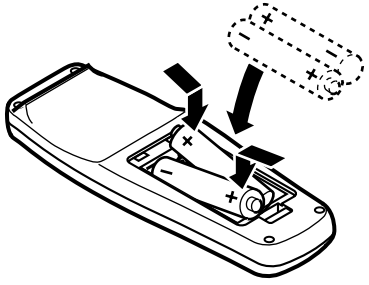

Check your television first!

Does your television have the Audio/Video input jacks?

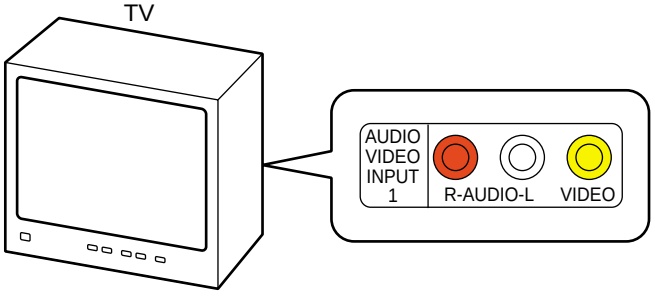

Yes

No

2 Hook up (TV and DVD video player)

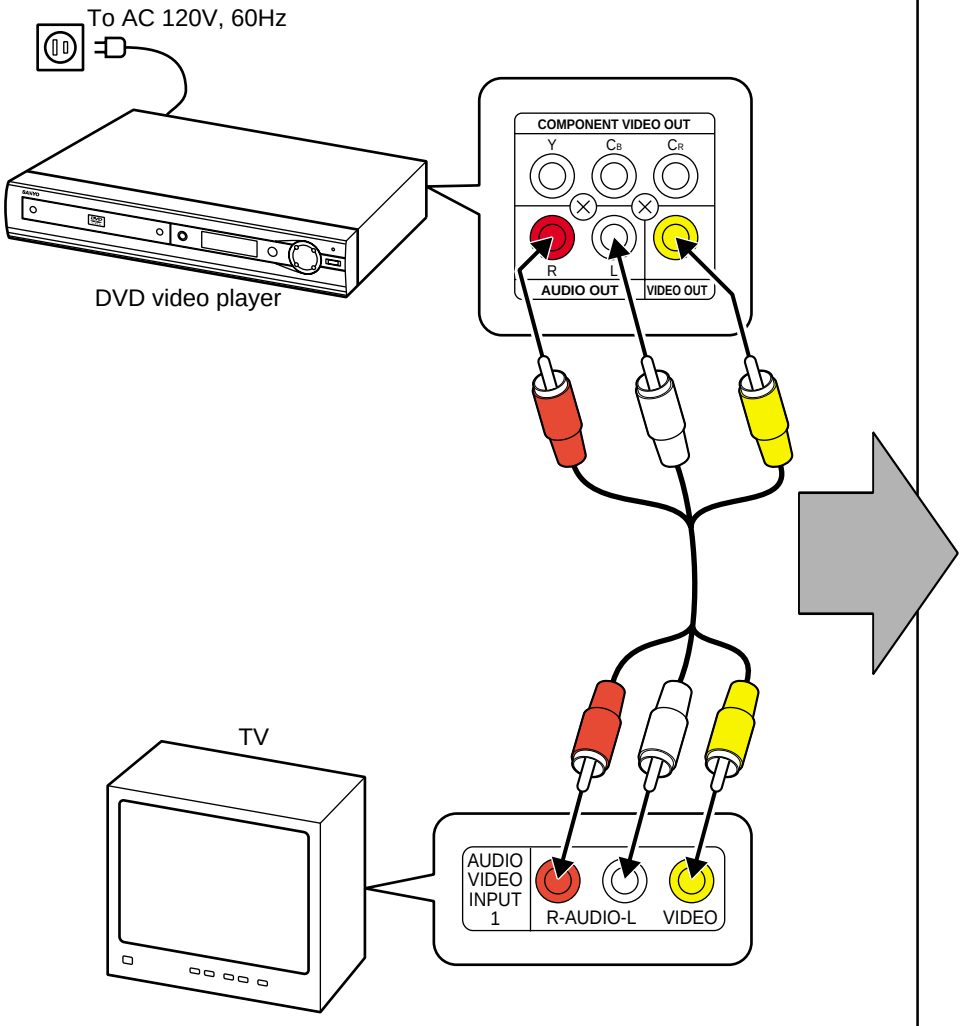

1AD6P1P1609--C DWM-380, Issue Number 4, Printed in China

2A Hook up (Using RF Modulator, not supplied)

DVD video player, TV and RF Modulator connections

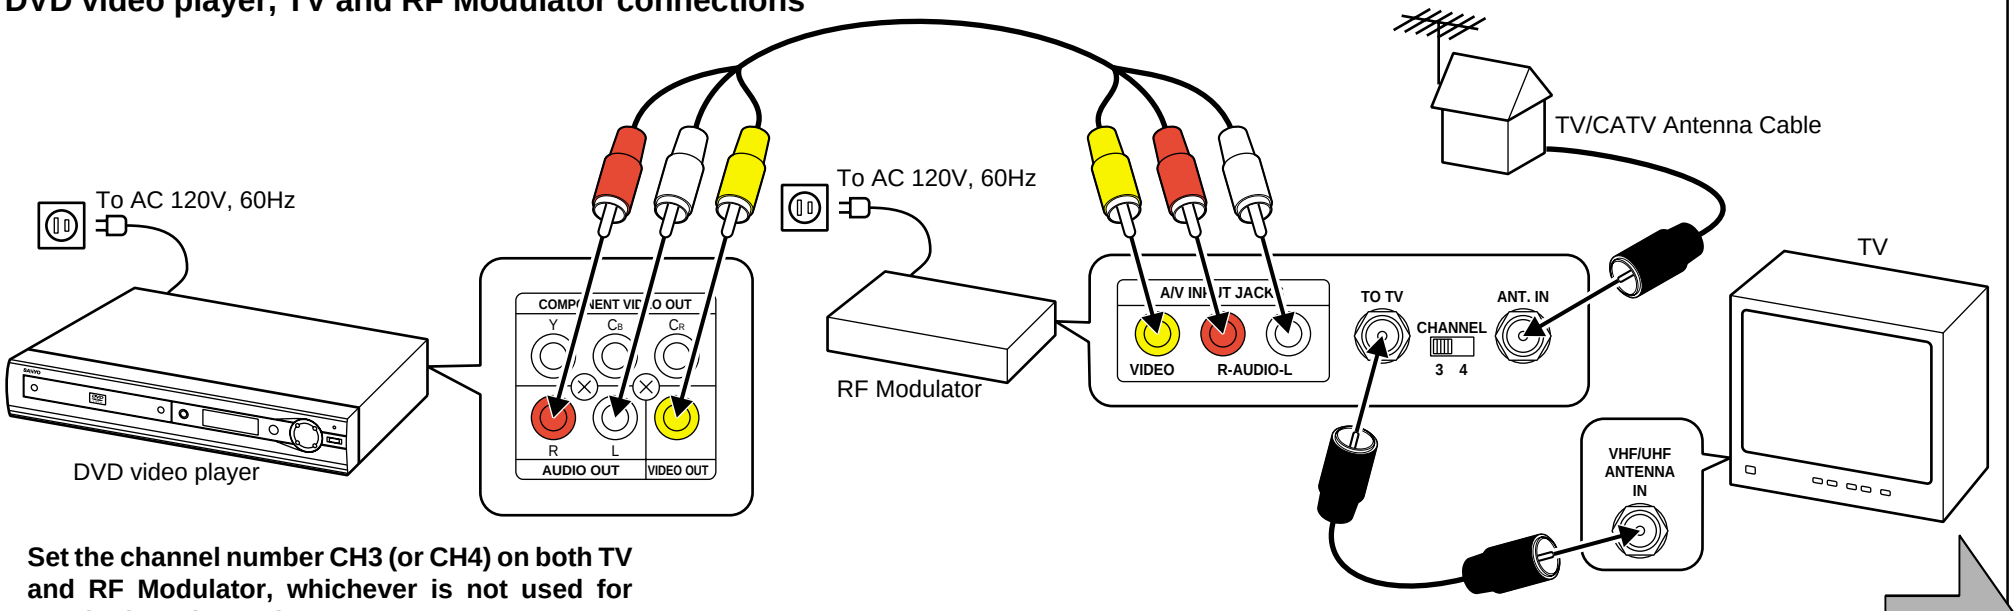

Set the channel number CH3 (or CH4) on both TV and RF Modulator, whichever is not used for regular broadcasts in your area.

DVD video player, VCR, TV and RF Modulator connections

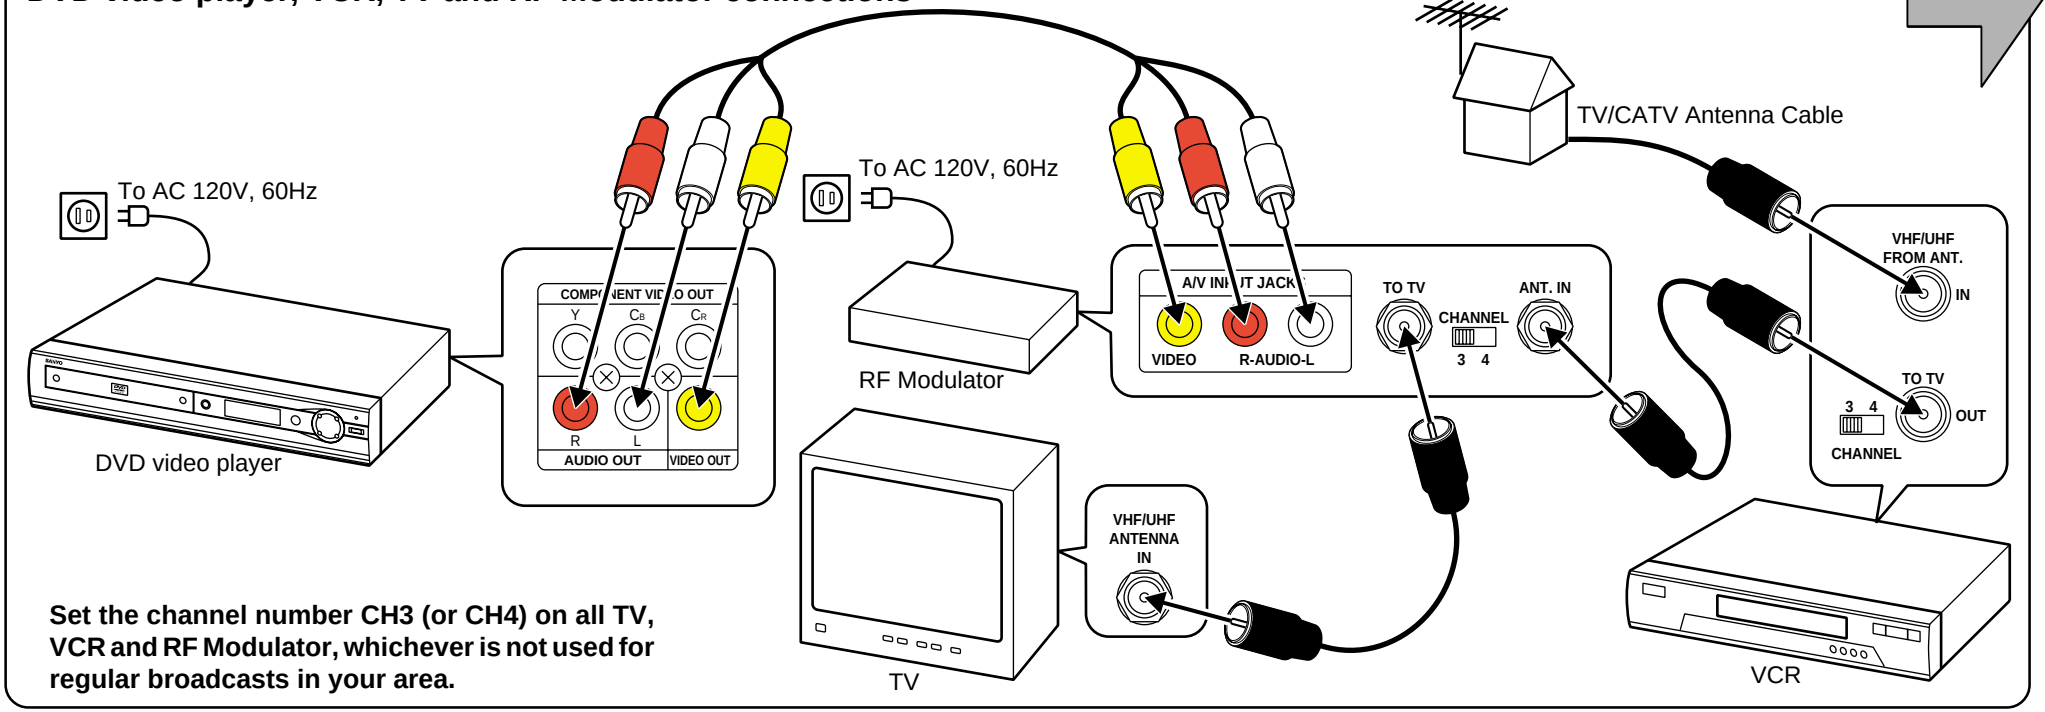

Set the channel number CH3 (or CH4) on all TV, VCR and RF Modulator, whichever is not used for regular broadcasts in your area.

3 TV setting

Turn on your television.
Select the video input source from your television.
(Refer to your TV owner's manual.)

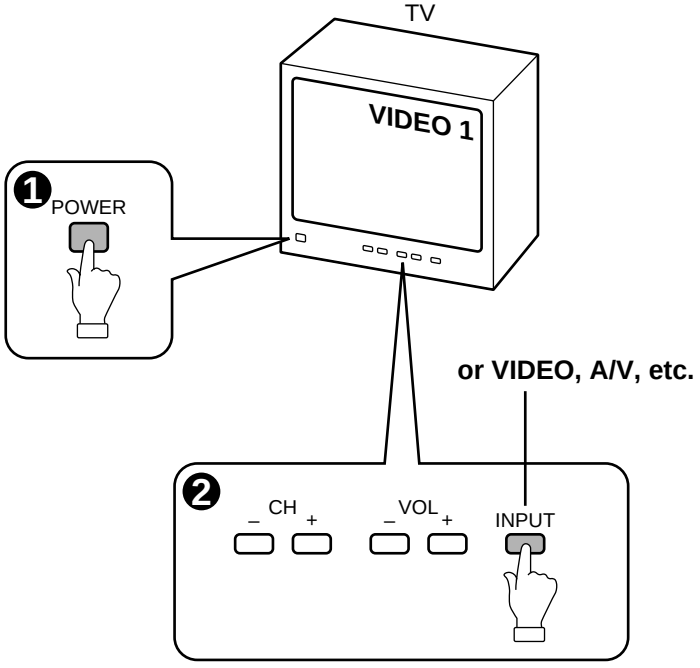

4 Load the disc and start playback.

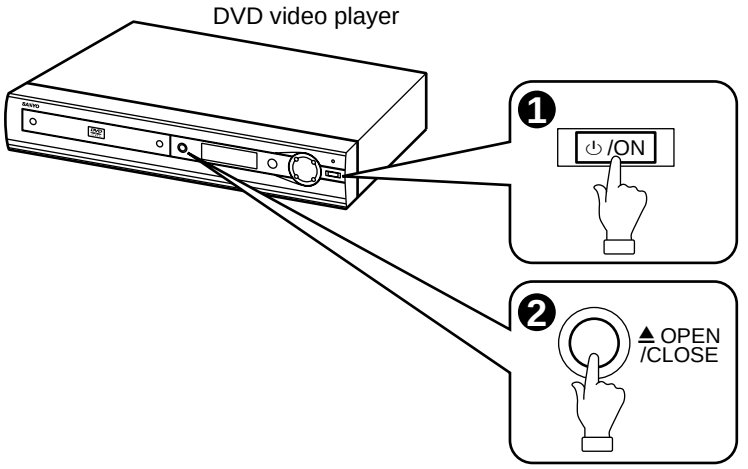

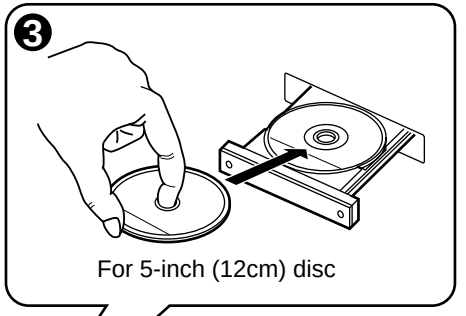

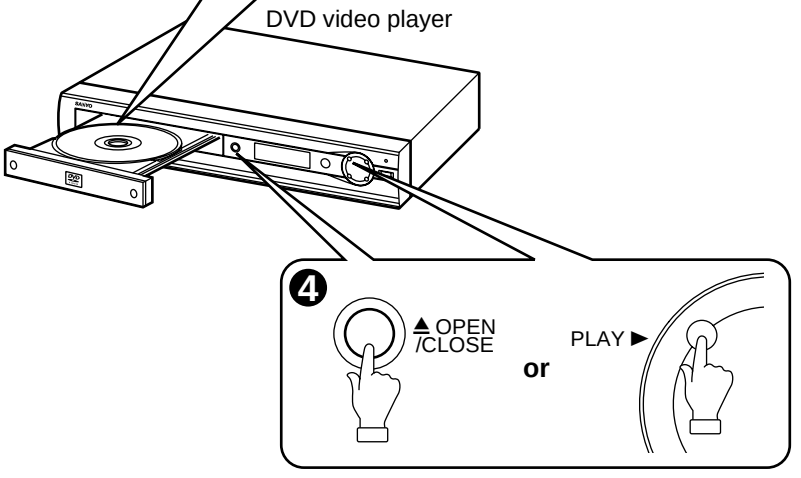

3A TV setting

Turn on your television.
Set the channel number CH3 (or CH4) on TV, which is the same as setting of RF Modulator.

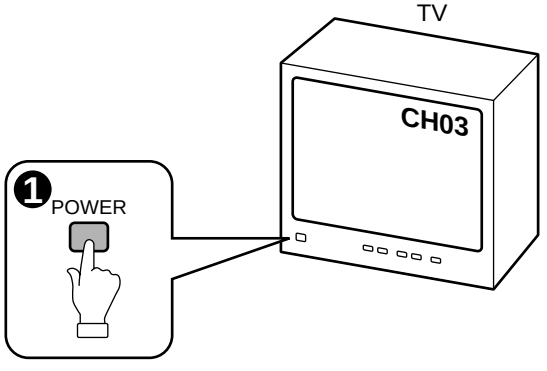

2 Press [0], then [3] (or [4]).

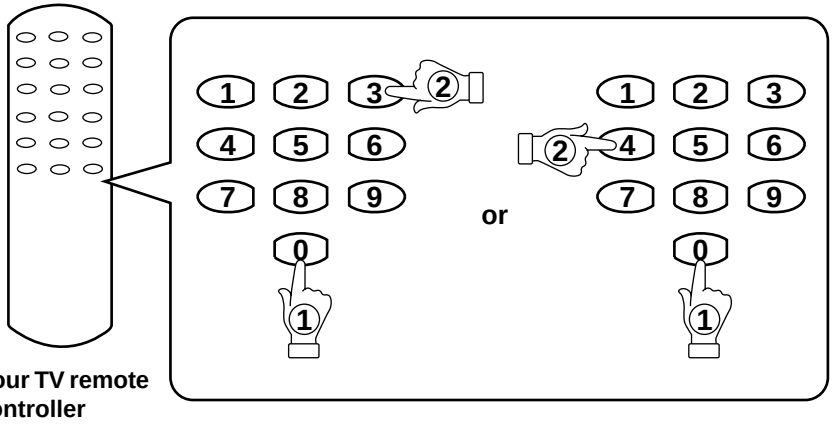

Your TV remote controller

5 If a DVD disc menu appears on the TV screen...

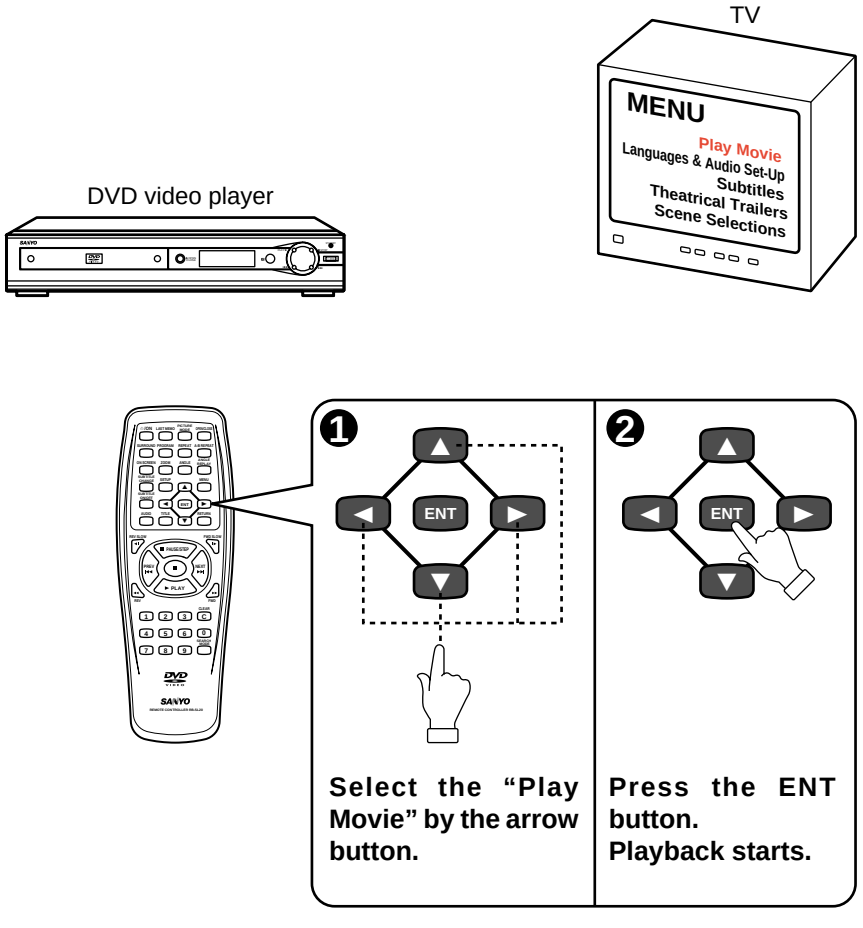

Select the "Play Movie" by the arrow button.

Press the ENT button. Playback starts.

Need help? Call
1-800-813-3435
Weekdays: 7:30 AM - 4:00 PM Central Time